

2.2hp		220vac 3 Phase & Single Phase	
PRM	Value		Description
A1-03	2220		Reset To Factory Defaults
A1-01	2		Access level
A1-02	0		Control method
b1-01	0		Reference selection
b1-03	0		Stopping method
b1-04	1		Reverse operation
o2-02	1		Operation STOP key
o2-05	1		Frequency Reference Setting Method Selection
o2-06	1		Operator detection
E1-04	300 Hz		Max. output frequency
E1-05	220 VAC		Max. voltage
E1-06	300 Hz		Base frequency
E1-07	145 Hz		Mid output frequency
E1-08	107 VAC		Mid output frequency voltage
E1-09	10 Hz		Min. output frequency
E1-10	6 VAC		Min. output frequency voltage
C1-01	3 sec		Acceleration time 1
C1-02	3 sec		Deceleration time 1
d1-07	0 Hz		Frequency reference 7
H1-04	21		Terminal S4 function selection
o1-03	3		Display scaling
o1-10	18000		Frequency reference Setup/Arbitrary display setup
o1-11	3		Frequency Reference Setting / Decimal Display
E2-01	7.5 A		Motor rated current
b1-14	1		Phase Order selection
C6-01	0		Duty Cycle
C6-02	1		Carrier Frequency Selection
H5-01	1		Station address