

| 4hp   |       | 220vac 3 Phase & Single Phase |   |
|-------|-------|-------------------------------|---|
| PRM   | Value |                               | Description                                       |
| A1-03 | 2220  |                               | Reset To Factory Defaults                         |
| A1-01 | 2     |                               | Access level                                      |
| A1-02 | 0     |                               | Control method                                    |
| b1-01 | 0     |                               | Reference selection                               |
| b1-03 | 0     |                               | Stopping method                                   |
| b1-04 | 1     |                               | Reverse operation                                 |
| o2-02 | 1     |                               | Operation STOP key                                |
| o2-05 | 1     |                               | Frequency Reference Setting Method Selection      |
| o2-06 | 1     |                               | Operator detection                                |
| E1-04 | 300   | Hz                            | Max. output frequency                             |
| E1-05 | 220   | VAC                           | Max. voltage                                      |
| E1-06 | 300   | Hz                            | Base frequency                                    |
| E1-07 | 145   | Hz                            | Mid output frequency                              |
| E1-08 | 107   | VAC                           | Mid output frequency voltage                      |
| E1-09 | 10    | Hz                            | Min. output frequency                             |
| E1-10 | 6     | VAC                           | Min. output frequency voltage                     |
| C1-01 | 3     | sec                           | Acceleration time 1                               |
| C1-02 | 3     | sec                           | Deceleration time 1                               |
| d1-07 | 0     | Hz                            | Frequency reference 7                             |
| H1-04 | 21    |                               | Terminal S4 function selection                    |
| o1-03 | 3     |                               | Display scaling                                   |
| o1-10 | 18000 |                               | Frequency reference Setup/Arbitrary display setup |
| o1-11 | 3     |                               | Frequency Reference Setting / Decimal Display     |
| E2-01 | 13    | A                             | Motor rated current                               |
| b1-14 | 1     |                               | Phase Order selection                             |
| C6-01 | 0     |                               | Duty Cycle  |
| C6-02 | 1     |                               | Carrier Frequency Selection                       |
| H5-01 | 1     |                               | Station address                                   |
|       |       |                               |   |